



**Instructions 1401-X00 (En)**


Section	1401
Effective	May 2026
Replaces	September 2025

Original instructions




# ***B200 Flow Control*** **SCREW COMPRESSORS**


**12R/10L PS**

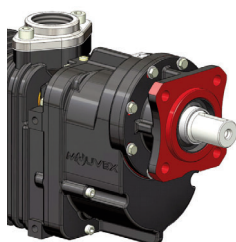

**12R/10L PF**

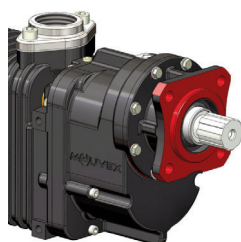

**12R/10L HY**

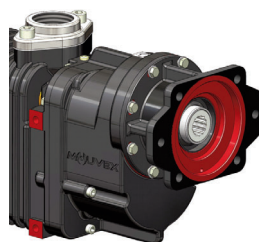

**INSTALLATION**  
**OPERATION**  
**MAINTENANCE**  
**SAFETY**  
**STORAGE**

**EC CERTIFICATE OF CONFORMITY :**

The EC Certificate of Conformity (paper version) is systematically attached to the equipment when shipped.

**WARRANTY :**

B200 Flow Control compressors are covered 36 months by warranty within the limits mentioned in our General Sales Conditions. In case of a use other than that mentioned in the Instructions manual, and without preliminary agreement of MOUVEX, warranty will be canceled.

Warranty extension : See § WARRANTY.



Z.I. La Plaine des Isles - F 89000 AUXERRE - FRANCE  
Tel. : +33 (0)3.86.49.86.30 - Fax : +33 (0)3.86.49.87.17  
contact.mouvex@psgdover.com - www.mouvex.com

Your distributor :

# MOUVEX TRUCK SCREW COMPRESSOR

## SAFETY, STORAGE, INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

### MODEL : B200 Flow Control

#### Definition of safety symbols



This is a SAFETY ALERT SYMBOL.

When you see this symbol on the product, or in the manual, look for one of the following signal words and be alert to the potential for personal injury, death or major property damage.



Warns of hazards that **WILL** cause serious personal injury, death or major property damage.



Warns of hazards that **CAN** cause serious personal injury, death or major property damage.



Warns of hazards that **CAN** cause personal injury or property damage.

#### NOTICE

Indicates special instructions which are very important and must be followed.

#### REMARKS :

MOUVEX truck screw-type compressors **MUST** be installed in systems designed by qualified personnel. The installation **MUST** be in compliance with local standards, national regulations and rules of safety.

**This manual is designed to permit installation and commissioning of MOUVEX truck screw-type compressors and MUST accompany the compressor.**

**Maintenance of MOUVEX screw-type compressors must ONLY be carried out by qualified technicians. This maintenance must meet local and national standards as well as all safety regulations. Read this manual, including all instructions and warnings, in full BEFORE any use of MOUVEX compressors.**

**Reading and the removal of the labels on the MOUVEX compressor apply to approval.**

#### TABLE OF CONTENTS

*Page*













<b>1. GENERAL DATA</b> .....	<b>4</b>
1.1 Principle of operation .....	4
1.2 Technical characteristics .....	4
1.3 Operating ranges .....	5
<b>2. INSTALLATION</b> .....	<b>7</b>
2.1 B200 PF with truck power take-off .....	7
2.2 B200 PS with drive shaft .....	10
2.3 B200 HY with hydraulic motor .....	11
2.4 Piping .....	12
<b>3. USE OF COMPRESSOR</b> .....	<b>15</b>
3.1 Lubricant recommendations .....	15
3.2 Filling of lubricant .....	15
3.3 Operation .....	15
<b>4. MAINTENANCE</b> .....	<b>16</b>
4.1 Maintenance schedules .....	16
4.2 Compressor oil change .....	16
4.3 Inlet shaft replacement .....	17
<b>5. TROUBLESHOOTING</b> .....	<b>18</b>
<b>6. WARRANTY</b> .....	<b>19</b>
6.1 Warranty claims .....	19
6.2 24-months warranty extension .....	19
<b>7. STORAGE CONDITIONS</b> .....	<b>19</b>
7.1 Compressor .....	19
7.2 BSC2 oil .....	19
<b>8. SCRAPPING</b> .....	<b>19</b>
<b>9. COMPRESSORS FORM INFORMATION</b> .....	<b>20</b>
<b>10. OVERALL DIMENSIONS</b> .....	<b>21</b>

#### ADDITIONAL DOCUMENTATION

The table below gives the list of instructions in addition to this central instruction :

B200 application	Spare parts list
Torque limiter	NT 1401-AB00
Air cooler	NT 1401-AD00
12R/10L	PL 1401-X01

## SAFETY DATA

 <p><b>WARNING</b></p>		<p>IT IS IMPERATIVE TO APPLY THE TRUCK PARKING BRAKE AND TO BLOCK THE WHEELS BEFORE ANY INTERVENTION DUE TO RISKS OF SERIOUS BODILY INJURIES OR PROPERTY DAMAGE.</p>
<p>Hazardous machinery can cause severe personal injury or property damage.</p>		
 <p><b>WARNING</b></p>		<p>COMPRESSING GASES INTO A VESSEL CONTAINING FLAMMABLE OR EXPLOSIVE GASES OR COMPRESSING FLAMMABLE OR EXPLOSIVE GASES, CAN CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.</p>
<p>Hazardous fluids can cause fire, serious personal injury or property damage.</p>		
 <p><b>WARNING</b></p>		<p>FAILURE TO INSTALL ADEQUATELY SIZED PRESSURE RELIEF VALVE(S) CAN CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.</p>
<p>Hazardous pressure can cause personal injury or property damage.</p>		
 <p><b>CAUTION</b></p>		<p>COMPRESSOR, PIPING AND ACCESSORIES WILL BECOME HOT DURING OPERATION AND CAN CAUSE SERIOUS PERSONAL INJURY.</p>
<p>Extreme heat can cause injury or property damage.</p>		
 <p><b>WARNING</b></p>		<p>CONTENTS OF THE COMPRESSOR, TANK, PIPING, AND FILTERS COULD BE HAZARDOUS TO HEALTH. TAKE ALL NECESSARY PRECAUTIONS WHEN PERFORMING COMPRESSOR SERVICE OR MAINTENANCE.</p>
<p>Hazardous or toxic fluids can cause serious injury.</p>		
 <p><b>WARNING</b></p>		<p>THE NOISE EMITTED BY WORKING MOVEX SCREW COMPRESSOR CAN BE HIGHER THAN 80 DBA. THE END USERS MUST USE, WHEN NECESSARY THE APPROPRIATE EAR PROTECTIONS. FAILURE TO WEAR HEAR PROTECTIONS IN AREAS WHERE THE NOISE IS HIGHER THAN 80 DBA CAN LEAD TO PERMANENT BODY DAMAGE.</p>
<p>A loud noise can cause permanent body damage.</p>		

### SAFETY CHECK LIST

1. Before operating the compressor, ensure the vessel to which the compressor is connected is certified to withstand the pressure and /or vacuum produced.
2. Verify adequately sized relief valves have been fitted to protect the vessel. Do not use solvents or inflammable products for cleaning the pipelines and the accessories.
3. Gas/air mixtures which are potentially volatile/explosive must not be introduced or allowed to be introduced into the compressor.
4. All pressure vessel and piping connected to the compressor must be isolated and in a safe operating condition.
5. Operators should wear ear protection when operating truck mounted compressors.
6. There are components within the compressor of sufficient weight to cause injury if mishandled. Use proper lifting devices as necessary.
7. Where necessary, this equipment should be grounded to control static electricity.
8. The temperature of the air leaving the compressor is elevated above ambient due to air compression. Check that the elevated temperatures do not adversely affect the product and any material used in design of the system. Attach clearly marked warning signs to warn of potentially hot surfaces on the compressor, piping and accessories which will burn if touched.
9. Mounting of the compressor must be correctly engineered and the compressor must be properly secured. See § INSTALLATION.


### NOTICE :

**MOVEX COMPRESSORS ARE DESIGNED TO PRODUCE COMPRESSED AIR. NOT TO PUMP LIQUIDS, LIQUEFIED GASSES OR POWDERS THOUGH THE COMPRESSOR. TO DO SO WOULD VOID THE WARRANTY.**

### LIFTING POINTS :


The compressor can be picked up from underneath to be transported.

Discharge flanges threads can be used to install a lifting lug in order to transport the compressor.

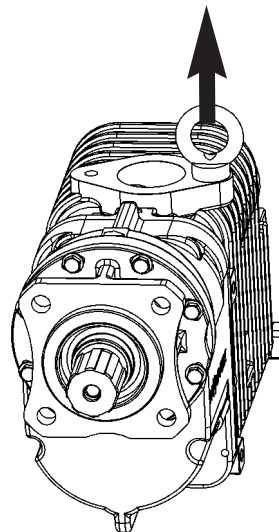

# 1. GENERAL DATA

## 1.1 Principle of operation

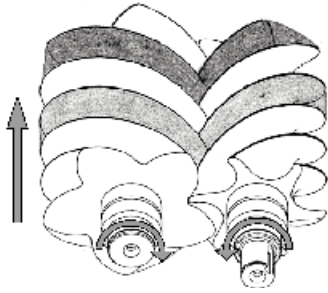

The male screw and the female screw mesh and rotate in opposite directions inside the casing fitted with inlet and discharge ports.

Rotation generates a volume increase on the inner face between threads and grooves, which corresponds to inlet, and a volume reduction on the upper face, which corresponds to compression.

On the discharge port side, a set of gears synchronizes the male screw and the female screw. Thus, the screws are not in contact. The discharged air does not enter in contact with any friction part and remains clean and free from particles.

On the drive shaft side, the female screw or the male screw according to the inlet shaft direction rotation is driven by a set of step-up gears.

Oil circulates, lubricating gears and ball bearings.

On the non-drive end side, the ball bearings are lubricated permanently with grease.

Sealing is provided between lubricated parts and the compression stage by means of labyrinth seals.

These seals do not enter in contact with the shaft and are not subject to wear.

Thanks to their rugged design, B200 compressors have a long service life.

B200 compressors need very limited maintenance, which reduce vehicle downtime.

B200 versions 12R (1200 rpm) or 10L (1000 rpm) were defined so as to drive it directly through on the PTO or with a drive shaft. Thanks to this system, the installation is lighter and saves space on the side of the vehicle for other accessories.

## 1.2 Technical characteristics

The operating characteristics indicate the requirements to be met, on the B200 compressors, in order for the equipment to benefit from the associated warranty.


The operating characteristics for the B200 are given in the indicative operation conditions : ambient temperature and air inlet temperature 20°C, atmospheric pressure : 1013 mbars.

Speed :

B200	1	2	3	4
12R (rpm)	840	960	1080	1200
10L (rpm)	700	800	900	1000
Maximum discharge pressure (bar)	2	2	2,5	2,5
Maximum inlet temperature (°C)	40	40	40	40

### Characteristics of compressor :

Suction : 1 atm , 20°C Flow measurement : ISO 5167-2

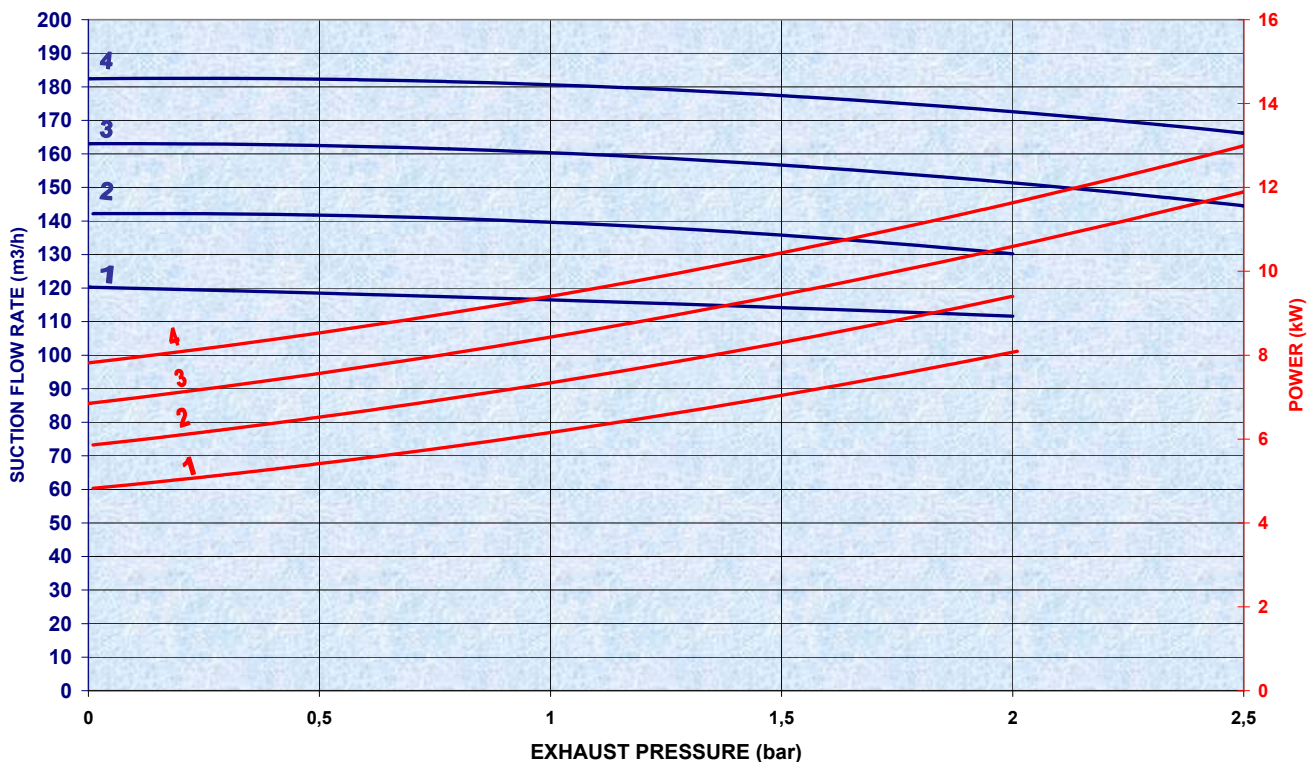

# 1. GENERAL DATA (continued)

## 1.3 Operating ranges

The operating ranges specified in the § TECHNICAL CHARACTERISTICS give the conditions that must be respected on mounting and packaging of the B200 compressors, in order to be able to benefit from the guarantees for these pieces of equipment.

The MOUVEX relief valve is designed in order to release any potential overflow. A speed reduction is therefore needless otherwise to increase the machine temperature.

**We recommend to set a single working point corresponding to the maximum speed of the compressor, which allows an optimal cooling. This operating point (otherwise the range) must be absolutely fixed by the Motor management in order to avoid any use outside these limits. See § MOTOR MANAGEMENT.**

### MAXIMUM ACCEPTABLE DISCHARGE PRESSURE (see § TECHNICAL CHARACTERISTICS)

The Check Relief Valve (CRV) is available with the setting 2 bar, 2,3 bar and 2,5 bar.

It is necessary to select the required value depending on the limits of the tank, the position of the CRV and the value of the pressure losses so that the maximum pressure at the compressor is controlled.

The CRV is assembled and tested by us, its opening pressure at full flow (closed discharge valve) may fluctuate slightly based on the following parameters :


- Dimensional dispersion associated to the tolerances of components.
- When the CRV is cold, it generates a greater pressure of 0,15 bar.
- The opening of valves naturally generates pressure losses, pressure at full flow is therefore increased.

As a result, a hot CRV can reach in full flow a pressure greater than its value of calibration in the range of 0,35 bar maximum. A 2,5 bar CRV is therefore likely to reach 2,85 bar in full flow.

The operating mode with a closed valve (no unloading flow) is therefore allowed only intermittently (less than 1 min), whatever the type of relief valve used. In this case, the full flow goes out and generates an unnecessary pressure rise. The result is an overheating of the compressor and potentially irreversible damages not covered by our warranty.

### B200 Flow Control 2,0 bar : Débit et pression acoustique/Flow rate and acoustic pressure

Aspiration Compresseur/Compressor suction 1 atm 20°C  
Mesure débit selon/ Flow measurement : ISO 5162-2  
Mesure bruit/ Noise measurement : 1m de la CRV; 1,5 m du compresseur/ 1 m from the CRV; 1,5 m from the compressor

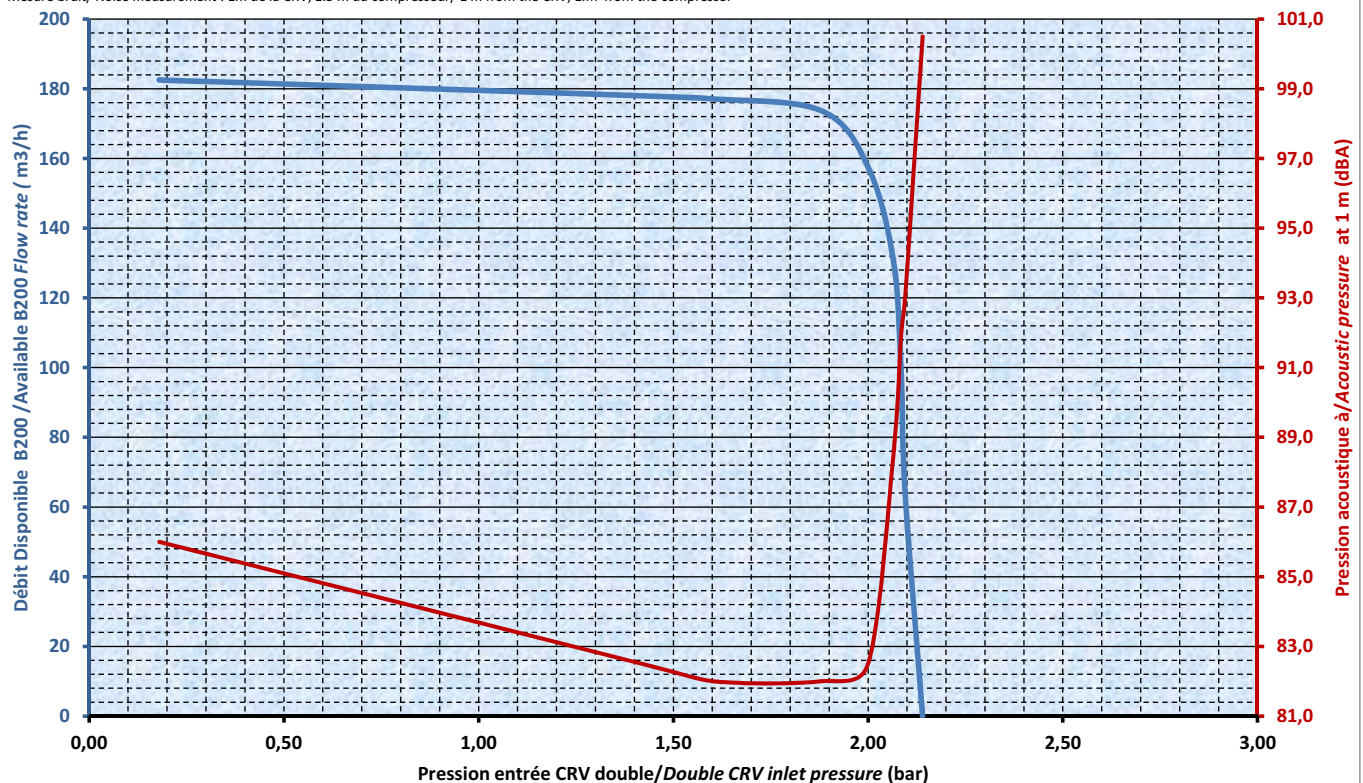


# 1. GENERAL DATA (continued)

## B200 Flow Control 2,3 bar : Débit et pression acoustique/Flow rate and acoustic pressure

Aspiration Compresseur/Compressor suction 1 atm 20°C

Mesure débit selon/ Flow measurement : ISO 5162-2

Mesure bruit/ Noise measurement : 1m de la CRV; 1.5 m du compresseur/ 1 m from the CRV; 1.5 m from the compressor

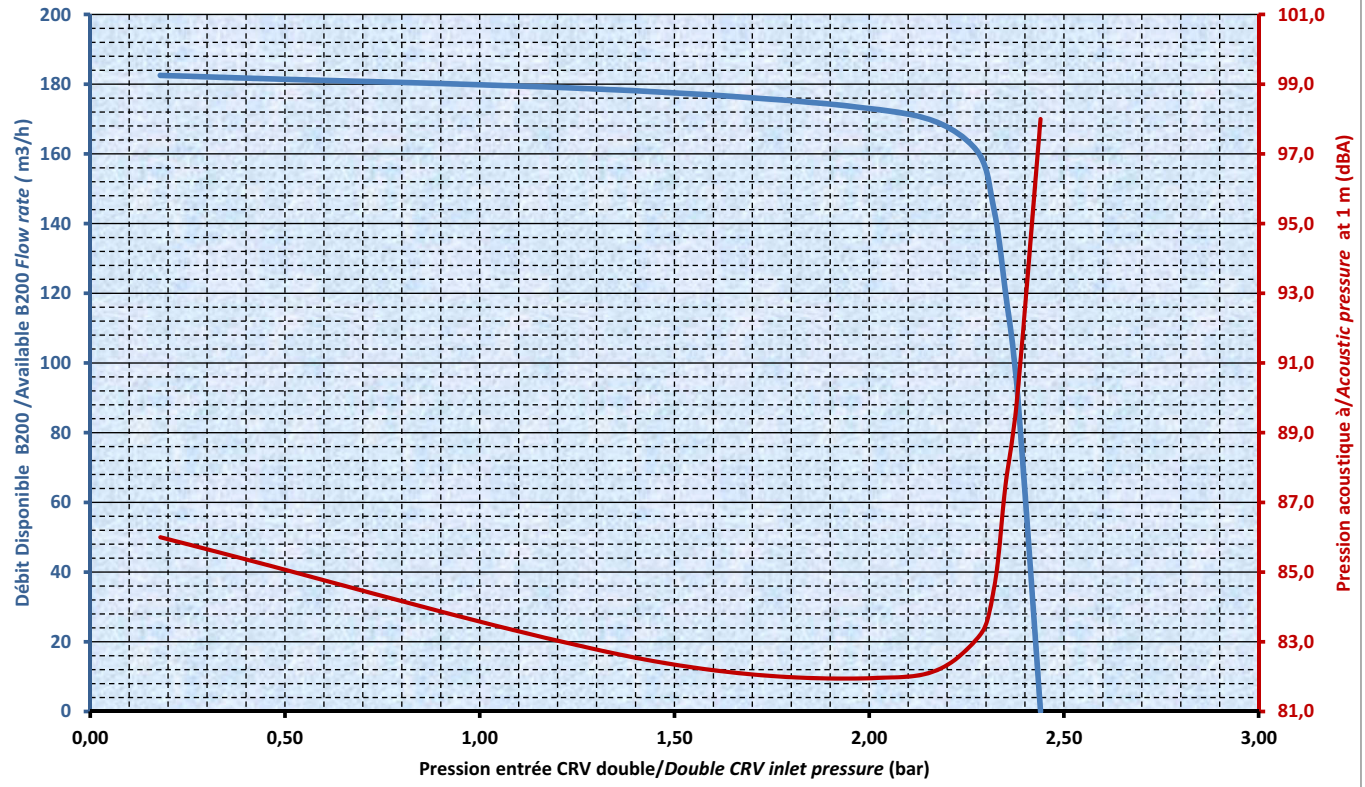


## B200 Flow Control 2,5 bar : Débit et pression acoustique/Flow rate and acoustic pressure

Aspiration Compresseur/Compressor suction 1 atm 20°C

Mesure débit selon/ Flow measurement : ISO 5162-2

Mesure bruit/ Noise measurement : 1m de la CRV; 1.5 m du compresseur/ 1 m from the CRV; 1.5 m from the compressor

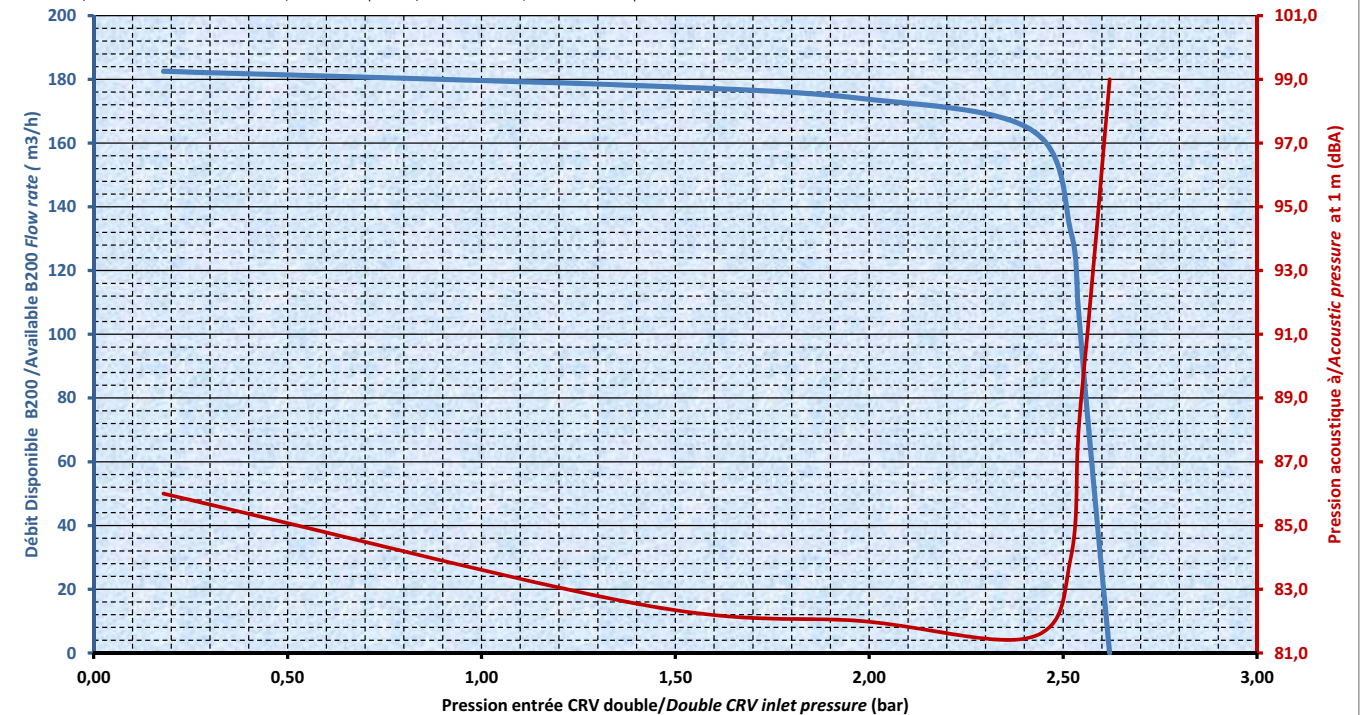

## 2. INSTALLATION

### 2.1 B200 PF with truck power take-off

#### 2.1.1 Installation of the compressor

The B200 PF compressors have a male splined shaft DIN 5462 / ISO 14 and a mounting flange ISO 7653-D that allows them to be installed directly on declutchable power take-offs.



#### Power Take Off specifications :

- **Must allow a gravity torque of 50 Nm and be able to accept a working torque of 124 Nm along all the unloading duration.**

#### Tank builders :

- **MERCEDES :**
  - Original model in aluminium type NA 131 2C compatible, in compliance with the dispensation delivered by MERCEDES.
  - Every other model in cast iron or aluminium in compliance with the specifications above.
- **DAF / IVECO / MAN / RVI / SCANIA :**
  - Every original or not original model, whatever the material : cast iron or aluminium, in compliance with the specifications above.
- **VOLVO :**
  - Original model in aluminium type PTR DM compatible for the range FH/FM in compliance with the dispensation delivered by VOLVO.
  - Every other model in cast iron or aluminium in compliance with the specifications above.

#### Not allowed :

- **Power take off with double outlet**


#### Installation and operating conditions :

- **The use of the discharge flexible supplied by MOUVEX, fitted in accordance with the B200 Instructions.**
- **The use of the fixation kit supplied by MOUVEX, fitted in accordance with the B200 Instructions.**
- **No extra bracket required to fix the B200.**
- **B200 must be fitted, operated and serviced in a proper installation in accordance with the B200 Instructions, with the PTO Manufacturer and Truck Builder Instructions.**


Installation is done with screws or studs, minimum grade 8.8.

The B200 PF is provided with a mounting kit that includes a metallic PTO seal, and 4 specific nuts and washers that it is essential to use.

If this is possible, tighten the 4 nuts to 37 Nm for all the PTOs. Don't put any grease on the studs.

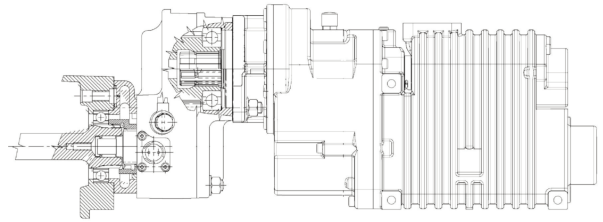


The compressor can be mounted in slightly tilted position, but should remain within the angular values defined on the figures below.

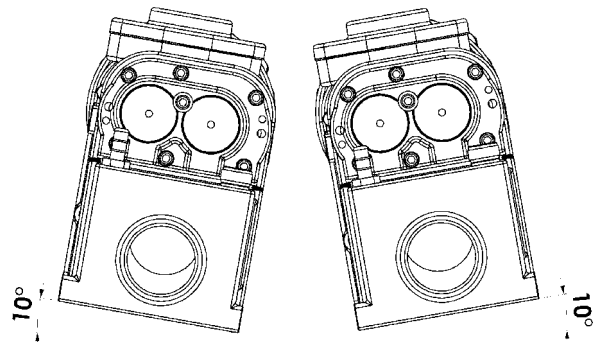

The tapped holes in step-up casing **1086** and the openings on cover **3** can be used to obtain a suitable inclination, whatever the inclination of the PTO flange.

To obtain only a slight inclination of the PTO flange, it is possible to bring the compressor back in a horizontal position, taking care to proceed as follows :


- Loosen the 8 screws **1095** without removing them.
- Put the compressor in the desired position.
- Tighten the screws **1095**.

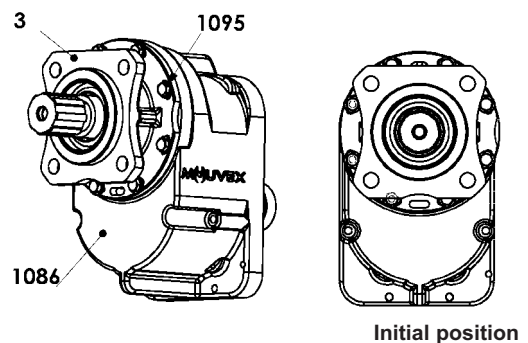


## 2. INSTALLATION (continued)

To obtain a strong inclination of the PTO flange, it is possible to bring the inclination of the compressor to an angle lower than 10°, taking care to proceed as follows :


- Loosen and remove the 8 screws **1095**.
- Remove the screws **1095** and the cover **3**.

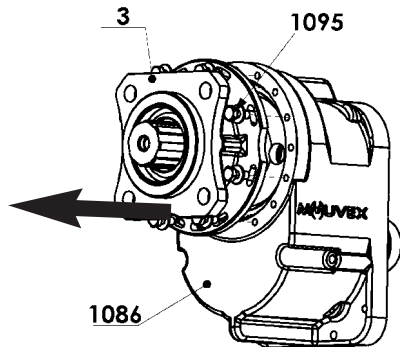

- Turn the cover **3** in order to offset the ports and position them over the next set of tapped holes on the casing **1086**.

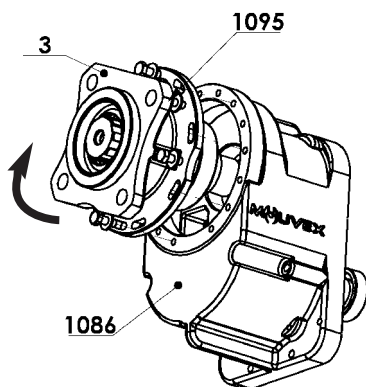

- Engage the cover **3** in the desired position.
- Tighten the 8 screws **1095**.

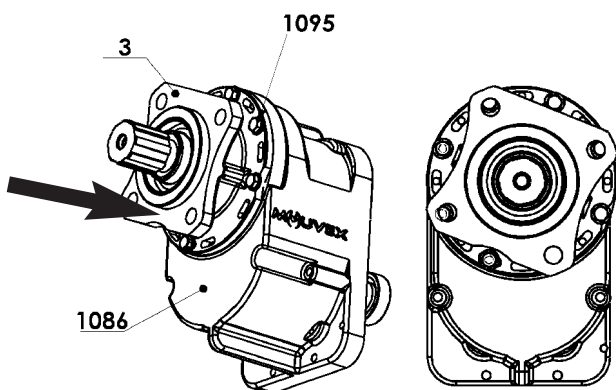

Final position



Screws **1095** must be :

- equipped with their lock washers, notches on the side of the screw head,
- sealed with Loctite® \* thread locking 243 or equivalent,
- tightened at 13 Nm.

### 2.1.2 Adjustment of the drive speed


For compressors that are secured by flange on the power take-off or on the hydraulic motor, the compressor drive speed can only be measured indirectly on the male or female screw of the compressor, using a tachometer with a maximum capacity of 20 000 rpm.

A contact tachometer of the Multimetrix® RPM82 type is perfectly well suited for measuring the speed on the screws of the B200 compressor.


Since the male and female screws do not rotate at the same speed, refer to the tables in the paragraphs below in order to establish the correspondence between the drive shaft speeds and the speed of the screw on which the measurement is performed :

- Measure on the male screw : .....Table 1
- Measure on the female screw : ....Table 2

To access the rotating screws, unscrew screw **38** and remove plugs **20**.

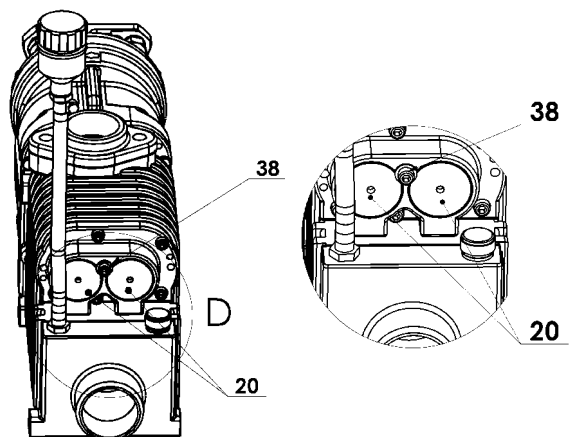

In order to check that the compressor is rotating in the right direction, check that the male and female screws rotate in the directions specified on the drawing below, whatever the drive variant (B200 12R and B200 10L) :

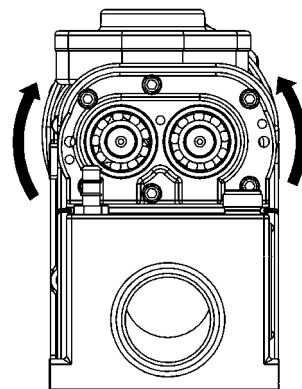

The B200 compressors fitted with a check valve can withstand a short operating time (less than 30 seconds) in the opposite direction, as required for checking the rotation direction.

#### NOTICE :


Prolonged operation in a direction different from the direction indicated on the drawing below may cause serious damage to the compressor and would cancel the warranty.

\* Loctite® is a registered trademark.

## 2. INSTALLATION (continued)

Reversing the rotation direction requires that the compressor be returned to the factory.

Speed pick-up on the male screw :

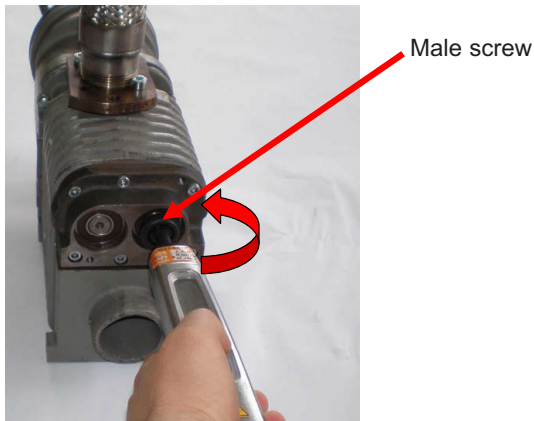


**Table 1**

**Male screw and drive shaft speed correspondence**

	Inlet shaft speed (rpm)	Male screw speed (rpm)
B200 12R	850	13 910
	1 000	16 365
	1 100	18 000
	<b>1 200</b>	<b>19 640</b>
B200 10L	700	13 750
	800	15 710
	900	17 675
	<b>1 000</b>	<b>19 640</b>

Speed pick-up on the female screw :

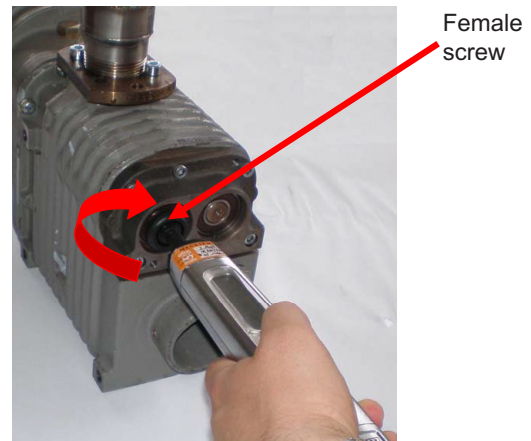

**Table 2**

**Female screw and drive shaft speed correspondence**

	Inlet shaft speed (rpm)	Female screw speed (rpm)
B200 12R	850	11 600
	1 000	13 640
	1 100	15 000
	<b>1 200</b>	<b>16 365</b>
B200 10L	700	11 450
	800	13 095
	900	14 730
	<b>1 000</b>	<b>16 365</b>

### 2.1.3 Motor management

The Motor management is mandatory, it has to ensure 2 missions :

- **To secure the operating range :** The operating point (otherwise the range) must be set to avoid any operation outside the range. If a risk remains (need to switch in complement a gear box button) an information sticker shall be affixed in the cabin.
- **To ensure a smooth start-up :** The start-up of the PTO must be carried out gradually without generating a peak of torque to avoid damaging the Compressor. The maximum peak torque that can be supported by the compressor is 600 N.m. This is particularly sensitive for the B200 PF which is equipped with a shaft groove.

The operating speed of the compressor must be reached in more than 0.25 s.


It is in particular to ensure that the parameter "TRANSMISSION INPUT SPEED" (N° 10.520 on MERCEDES) is set to a value less than 10. Otherwise, that will generate in a medium term a breakage of the B200 shaft.

## 2. INSTALLATION (continued)

### 2.2 B200 PS with drive shaft

#### 2.2.1 Installation of the compressor

- Mount the compressor in a position where it is protected from dirt, debris and road spray. The mounting location should allow for regular inspection, cleaning and maintenance.
- The B200 compressor mounting points are located on the sides of the body.

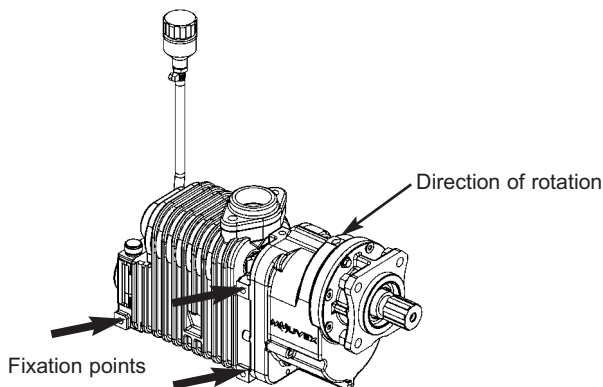

Installation is performed by means of screws, minimum grade 8.8.

#### 2.2.2 Recommended drive conditions

The drive shaft must be sized so as to be able to accept the loads above and also the starting torque.

Operating torque at full speed

B200	Pressure		
	1,5 bar	2,0 bar	2,5 bar
Torque 12R (Nm)	83	93	103
Torque 10L (Nm)	100	111	124


It is the responsibility of the installer to check that his design protects the transmission if the compressor blocks.

**Compressors B200 12R PS and B200 10L PS must be protected by a 400 Nm torque limiter, in order to protect the truck's transmission if the compressor is jammed. MOUVEX may not be held liable for any damages resulting from such jamming if the torque limiter has not been installed.**

Comply strictly with the following instructions :

	<b>WARNING</b>
	<b>DRIVES SHAFTS MUST BE GUARDED IF EXPOSED. OPERATION WITHOUT GUARDS CAN CAUSE SERIOUS PERSONAL INJURY, MAJOR PROPERTY DAMAGE OR DEATH.</b>
<b>Do not operate without guard in place.</b>	


- The drive shaft slides perfectly well during rotation. Square slip joints are forbidden.
- Drive shaft length should be as short as possible and the drive shaft **MUST** be balanced.



**CAUTION**

The non balancing of the drive shafts can lead to mechanical ruptures that are susceptible of causing important property damage and/or serious injuries.

- The drive shaft and compressor shaft **MUST** be parallel within 1° and have a maximum of 10° compound misalignment. See Table :

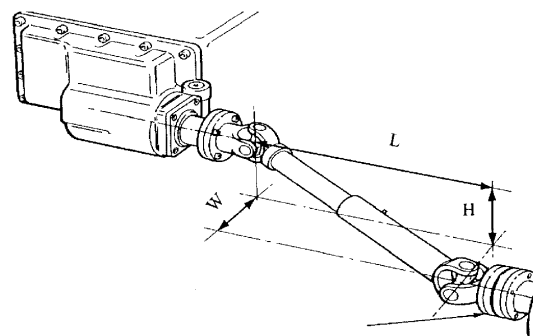

A	Universal joint angle	
0,017	1°	VERY GOOD
0,035	2°	
0,052	3°	
0,070	4°	
0,087	5°	GOOD
0,105	6°	
0,125	7°	
0,141	8°	
0,158	9°	LIMIT VALUES
0,176	10°	
0,194	11°	
0,213	12°	
0,231	13°	
0,249	14°	
0,268	15°	

$$A = \frac{\sqrt{H^2 + W^2}}{L}$$

If H = Zero, A = W / L

If W = Zero, A = H / L

- Universal joints **MUST** be in phase, with the drive shaft slip joint at mid-position. Use an even number of universal joints.
- Make sure that the compressor rotates in the direction of the arrow on the body.

The B200 compressors fitted with a check valve can withstand a short operating time (less than 30 seconds) in the opposite direction, as required for checking the rotation direction.

#### NOTICE :

Prolonged operation in a direction different from the direction indicated on the drawing below may cause serious damage to the compressor and would cancel the warranty.

## 2. INSTALLATION (continued)


### 2.3 B200 HY with hydraulic motor

The B200 HY compressors have a female splined shaft ANSI B92-1a that allows to flange directly on hydraulic motor equipped with a shaft 13T 718 SAE 16/32 and a mounting flange SAE B 2 or 4 holes.


#### 2.3.1 Hydraulic motor assembly

It is possible to change the orientation of the lantern 230, taking care to proceed as follows :


- Loosen and remove the 8 screws 1095.

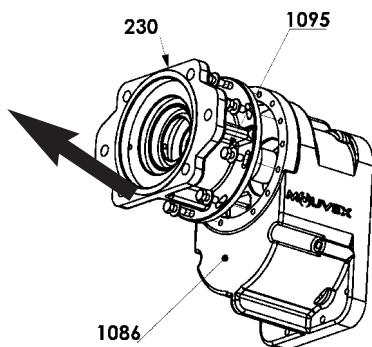


- Rotate the lantern 230 so as to offset the ports and move them over the set of tapped holes on casing 1086 that approach the desired position.

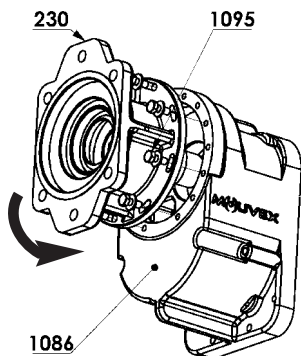

- Make sure that at least one of the 2 collectors is located in the lower part of the lantern 230, otherwise turn the lantern 230 by 180°.
- Engage the lantern 230.
- Tighten the 8 screws 1095.

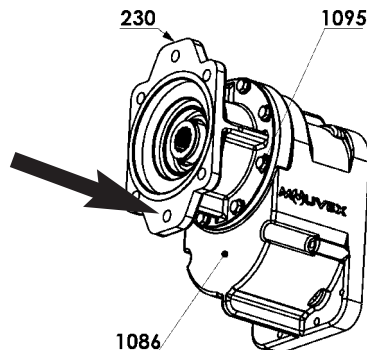

- Install the screwing plug 1204 in the highest collector on the lantern 230.

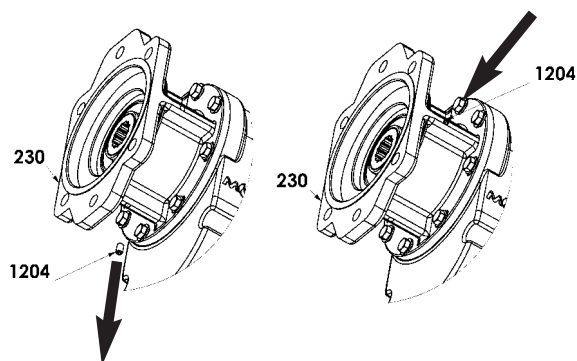

- Check that the rotation direction of the motor and the compressor are correct.
- Lubricate the motor shaft and the female splined shaft 1091 to facilitate subsequent disassembly.



Screws 1095 must be :

- equipped with their lock washers, notches on the side of the screw head,
- sealed with Loctite®\* thread locking 243 or equivalent,
- tightened at 13 Nm.

#### 2.3.2 Adjustment of the drive speed

See § ADJUSTMENT OF THE DRIVE SPEED.

\* Loctite® is a registered trademark.

## 2. INSTALLATION (continued)

### 2.4 Piping

#### 2.4.1 Inlet

The suction side of the compressor MUST be fitted with an adequately sized air filter, which MUST be protected from water, road spray, or other debris. This filter is available from MOUVEX. Use of wrong filter will void warranty. The compressor filter must be connected by means of a hose capable of operating in vacuum and of a sufficient length to absorb the relative movements of the compressor relative to the chassis. The compressor is delivered with an inlet connection kit which is installed as follows :

#### Composition of the kit :



Item	Description	Quantity
152A	Heat shrinkable sleeve	2
164	Hose (length 2 meters)	1
165-166	Clamp	2
884	Hump	1xØ50 (black) 1xØ57 (grey)

#### Assembling procedure :

- To cut the hose to the length requested.
- To fold back the end of the wire inside.




- To screw home the humps at the 2 ends.



- Result :



- To pass a heat-shrinkable sleeve on an end and to center it on the end of the hump. To retract gradually by means of a heat gun. Attention not to point the gun towards the hose not covered, risk of perforation. To proceed in the same way at the other end.

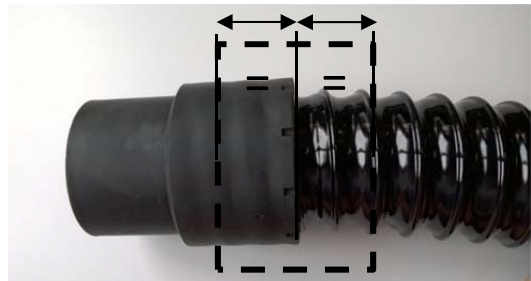

- To check the hose is perfectly clean inside, and to remove the protections caps on the compressor.
- To assemble the unit on the compressor inlet port and to tighten the clamp : cast solid end.

#### Example :



- To proceed in the same way with the air filter.



- To then suspend the hose while taking care to protect it from any friction and the potentially hot bodies such as muffler.

## 2. INSTALLATION (continued)

The inlet filter should be positioned to draw in clean, cool air, and should be mounted away from any engine heat and exhaust.

The compressor inlet suction air must be filtered in order to eliminate particles bigger than 5 µm.

The maximum pressure drop at suction must be lower than 75 mbar.

A restriction indicator system must permit changing the suction filter when it creates a pressure drop greater than 75 mbar.

The maximum acceptable temperature at suction as a function of equipment operating conditions is given in the § TECHNICAL CHARACTERISTICS.

### 2.4.2 Outlet

The flange supplied must be equipped with its gasket, screw tightened at 44 Nm.


Piping MUST be at least as large as the compressor suction and discharge connections.

All the connections located between the compressor and the trailer hose connection point must be absolutely waterproof. For that reason, they must be welded.


The B200 PF compressors directly flanged onto the power take-off must be fitted with the metallic discharge hose delivered with the equipment. This woven stainless steel hose is designed to avoid having any stresses applied on the compressor flange and the rigid pipes of the systems, as induced by the relative movements of the compressor with respect to the chassis.

For the B200 PF, it should cancel the stresses on the flange, as induced by the movement of the compressor, and respect the rules below :


- install a 90° elbow between the flange and the hose.
- support the stainless steel hose correctly at its end part.
- the hose output pins should be mounted in the same horizontal plane. Make sure that the installation allows a compressor displacement of ± 5 cm to be obtained.

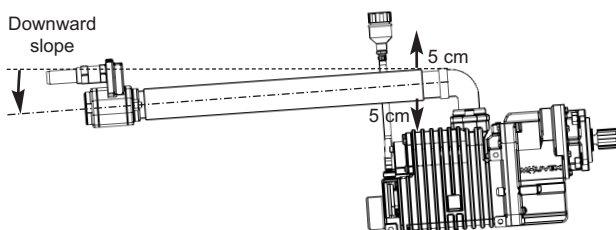

- on the same horizontal plane, if the output pins are not parallel, the bending radius must be as large as possible, and in any case at least equal to 50 cm. Make sure that the installation allows a compressor displacement of ± 5 cm to be obtained.

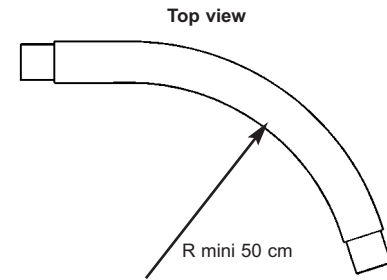

Installation rules : Discharge line

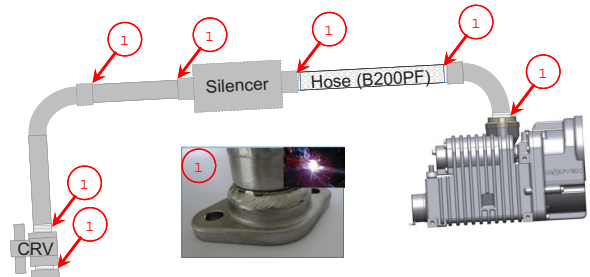

**All the connections must be welded and be the object of a waterproof quality control.**

During installation, position a pressure gage on the compressor output, so as to measure the operating pressure. The measurement should be done at the discharge flange level and should not exceed 2,5 bar over the allowable operating range of the compressor.

<p><b>WARNING</b></p>	<p><b>OPERATING A COMPRESSOR ABOVE ITS MAXIMUM OPERATING PRESSURE CAN CAUSE SUBSTANTIAL PROPERTY DAMAGE OR SERIOUS BODILY INJURIES.</b></p>
<p><b>Hazardous pressure can cause personal injury or property damage.</b></p>	

It is mandatory to protect the compressor with the Check relief valve supplied by MOUVEX. The check valve prevents any air from returning in the compressor when it is no longer in operation.

The safety valve protects the compressor against possible overpressure. The maximum set point of the valve is 2,5 bar. **If there is a drop in pressure between the pressure relief valve and the compressor, reduce the pressure relief valve setting by the value of the pressure drop.** It is the installer responsibility to check that the relief valve is compliant with the compressor performance for the application speed.



The compressor is delivered with a check and relief valve allowing 3 settings capabilities : 2 bar, 2,3 bar or 2,5 bar.

It will have to be selected depending of the installation limits and by making sure the maximum pressure of 2,5 bar of the compressor is never exceeded. Be careful in particular with the pressure drop located between the check relief valve and the compressor especially if an air cooler and a silencer are used.

## 2. INSTALLATION (continued)

It is forbidden to insert a damping valve in the pipe linking the compressor to the tank hose connector in order to avoid any risk of water entering.


Ensure that ALL components are capable of operation at the maximum system pressure limits and that all vessels are adequately protected by SEPARATE relief valves.

 <b>WARNING</b>	
	<b>FAILURE TO INSTALL ADEQUATELY SIZED PRESSURE RELIEF VALVE(S) CAN CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.</b>
<b>Hazardous pressure can cause personal injury or property damage.</b>	

### 2.4.3 Oil breather

Compressor B200 is fitted with an oil breather which is mounted on a hose for easier installation.

In case of the inclination of the compressor, it is essential to position the breather on the highest tapped hole. Invert the positions of the oil gage **399** and the breather assembly, as appropriate.

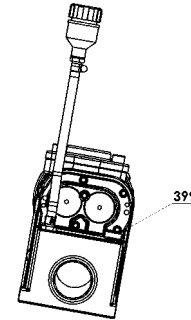


Position the breather plug in a clear area, to avoid any oil condensation.

Do not crush the hose when positioning the breather, so as to allow any oil vapors to be evacuated.

The hose mustn't be shortened,, keeps imperatively its original length.

The breather must be placed above the compressor, preferably with the connecting hose running up towards the breather.

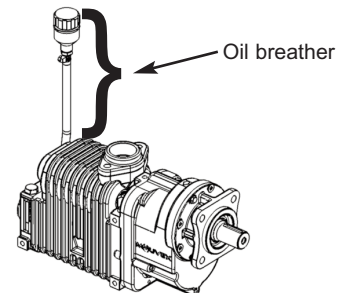

### 3. USE OF COMPRESSOR

The operator should remain nearby the equipment throughout the use to ensure the proper functioning of the system.

It is imperative to hold the hose in order to avoid whipping during pressurization.



#### 3.1 Lubricant recommendations

The MOUVEX screw compressor operates with MOUVEX BSC2 oil.

It is imperative to change the BSC2 oil every year or 500 operation hours.

The BSC2 oil covers operation from -30°C to +40°C.

#### 3.2 Filling of lubricant



**Our compressors are delivered without oil. The use of a compressor with an oil level different from 1,2 l ± 10% can lead to important property damage and serious injuries.**

Before starting the system, fill the casing with oil so that the oil level is set between the min and max value of the gauge.

#### 3.3 Operation

- The compressor must be started with the discharge valves open.
- Check the compressor drive shaft rotation direction :
  - B200 12R PS and B200 10L PS : The drive shaft rotation direction must match with the arrow on the body of the compressor.
  - B200 12R PF and B200 10L PF : Refer to § DIRECT INSTALLATION TRUCK POWER TAKE-OFF.

##### 3.3.1 Start-up procedure for manual gear box

- Start the engine and run with standard speed.
- Depress clutch and engage the PTO.
- Release the clutch SLOWLY.
- Set engine speed to give the correct compressor speed.



##### 3.3.2 Shutting down procedure for manual gear box

- Depress the clutch and disengage the PTO.



- Reduce engine speed to idle.



**ALWAYS DISENGAGE THE DRIVE BEFORE SLOWING ENGINE DOWN.**

- Release the clutch.



##### NOTICE :

Prolonged operation in a direction other than the direction of the arrow on the body can cause serious damages to the compressor and would cancel the warranty.

- Avoid if possible stopping or starting the compressor with the tank under pressure.
- At commissioning, check that the combinations of rotation speed and discharge pressure of the compressors are in conformity with those indicated in § TECHNICAL CHARACTERISTICS.



**During operation, the temperature of the surface of a compressor and nearby parts can be in the region of 200°C. The compressor and the parts located nearby are thus susceptible of provoking serious burns and property damage. Be careful to not approach elements that are sensitive to heat and affix plates informing users that the compressor is hot, to prevent any risk of burns.**

## 4. MAINTENANCE

### 4.1 Maintenance schedules

#### After every cleaning of the truck

Always run the compressor for 15 minutes to remove any water that inadvertently gets into the piping. DO NOT fog or introduce anti-corrosive liquids into the compressor to prevent corrosion : Use of liquids in the compressor will cause failure.

#### Weekly

1. The compressor should be run for at least 15 minutes to prevent moisture from collecting inside. This will reduce the risk of corrosion damage to the compressor and other equipment in the piping.
2. Inspect and clean air filter. Inspect DAILY if operating in dirty or severe environment. Check the condition of the inlet filter hose for splits and tears. Replace or repair as necessary.
3. Inspect compressor, system piping and components. Clean or repair as necessary.
4. Check power transmission line.
5. Check the air filter restriction indicator. When the indicator turns red, replace the filter cartridge. Before replacing the cartridge with a new one, clean the inside of the filter's body with a clean damp cloth.

#### Per manufacturer' s recommendations

Lubricate the universal seal (for B200 PS models).

#### Monthly

1. Check the relief valve(s) for wear and proper settings. Replace or adjust as necessary.
2. Check that the check valve works properly, replace as necessary.
3. Check the oil level and complete if necessary.

#### Yearly :


1. Check tightness of the 4 mounting nuts on the B200 PTO.

### 4.2 Compressor oil change

Oil recommendations : See § LUBRICANT RECOMMENDATIONS.

Depending on the inclination of the compressor, remove the lowest drain plug **44**.

Put plug **44** back into place and remove filling plug **399** and fill the compressor with new oil, as recommended in § LUBRICANT RECOMMENDATIONS.

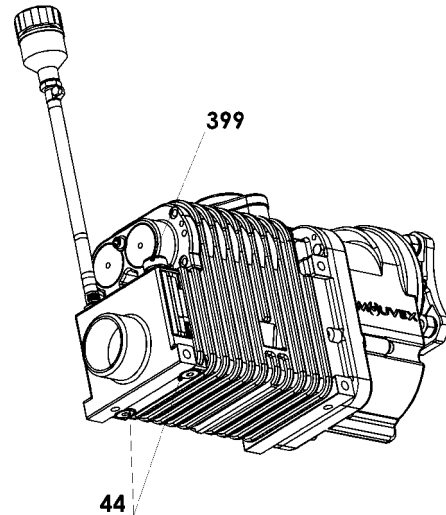

## 4. MAINTENANCE (continued)

### 4.3 Inlet shaft replacement

The B200 PF inlet shaft has a groove that breaks the shaft in case of excess torque, as required to protect the gear box and the PTO.

Before replacing the inlet shaft, it is essential to make sure that the compressor is not damaged :


- Loosen and remove the 8 screws **1095**.
- Remove the wheel, complete with the remaining part of the shaft.
- Rotate the wheel **6** manually and check that it can rotate freely and without any hard point over a complete rotation.
- Inspect the screws on the discharge part and make sure that there are not any marks of contact between the screws, or due to the presence of any foreign bodies.



The compressor is to replace if :


- wheel **6** does not rotate.
- wheel **6** cannot rotate easily.
- marks can be seen on the screws.
- Engage the bearing of shaft kit **1071** in the housing of casing **1086**.
- Check the state of the lip seals **1089** and the O'ring **40**. Make sure that they are not damaged.
- Engage the lantern **230** in the desired position.
- Tighten the 8 screws **1095**.

For the installation of the compressor on the power take-off, refer to § DIRECT INSTALLATION ON B200 PF TRUCK POWER TAKE-OFF.



Screws **1095** must be :

- equipped with their lock washers, notches on the side of the screw head,
- sealed with Loctite® \* thread locking 243 or equivalent,
- tightened at 13 Nm.

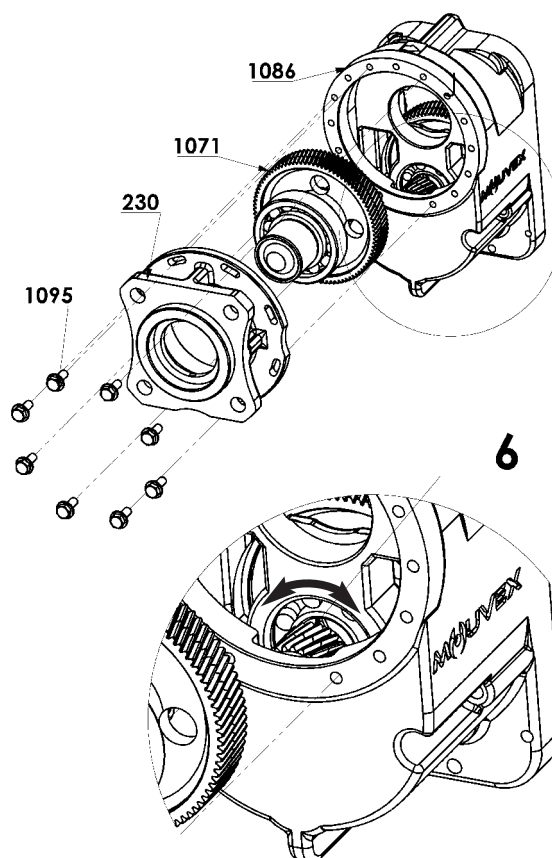

\* Loctite® is a registered trademark.

## 5. TROUBLESHOOTING

**CAUTION :**  
**OBSERVE ALL SAFETY WARNINGS CONTAINED IN THIS MANUAL.**

Problem	Possible origin	Possible solution
1. Pressure issue	Too much pressure drop.	To check pipes diameter.
	Relief valve damaged.	To check the opening point.
	No return valve damaged.	To check the proper operating of the No return valve.
2. Flow rate issue	Wrong Compressor speed.	To adjust the speed by taking care of the range allowed.
	Relief valve damaged.	To check the opening point.
3. Abnormal high temperature	Air filter clogged.	To clean the cartridge or to replace it.
	Air pressure too much high.	To see problems 1. / 2.
	Outside temperature too much high.	To respect the maximum external temperature allowed.
	Lack of oil.	To check the oil level.
	Compressor speed too much low.	To adjust the speed by taking care of the range allowed.
4. Inlet pressure drop > 75 mbar (clogging indicator red)	Air filter clogged.	To clean the cartridge or to replace it.
	Air inlet hose folded.	To check the air inlet hose.
5. Compressor doesn't operate	Torque limiter damaged.	To replace the torque limiter.
	Transmission damaged.	To consult your Service point.
6. Torque limiter damaged	Screw Compressor damaged.	To consult your Service point.
	Wrong motor / transmission management.	To consult your Truck dealer.
	Oil too much viscous.	To be in compliance with the MOUVEX Instructions.
7. Oil leak	Too much oil.	To check the oil level.
	Oil breather clogged.	To clean the oil breather.
8. Vibrations	Wrong motor speed.	To increase the speed by taking care of the range allowed.
	Transmission damaged.	To check the driving shaft.
	Lack of rigidity of the chassis.	To be in compliance with the Truck Manufacturer Instructions.

---

## 6. WARRANTY

### 6.1 Warranty claims

The compressor oil is considered as wear part.

No failure connected with wear part damage will be accepted under warranty conditions.

The following situations will void warranty for all components of the compressor :

- Installation not in accordance with the CL 1401-001 Control check list installation B200 FC.
- No MOUVEX Check relief valve.
- Tampering with the setting of the relief valve.
- Presence of foreign body inside the compressor body.
- Traces of damage representative of abnormal use of the compressor.
- Use of non genuine parts.
- If the compressor is repaired by a repairer who is not a MOUVEX-approved repairer.
- Construction of the package not validated by our Design Office.
- Use of an oil other than BSC2 (provide invoices).
- Presence of a dumping valve on the pipe linking the compressor to the tank hose connector.
- Motor management not fixed, allowing the operator a using outside the working range.

Before returning your equipment to the factory, you must first obtain an Equipment return approval (RMA) from our After Sales Department.

A Compressors form information shall be filled by the installer or distributor and send to MOUVEX in order to claim for a warranty.

### 6.2 24-months warranty extension

The 24-months warranty extension option increases the warranty for the screw compressor to 60 months :

- Europe zone only,
- Only concerns the bare shaft compressor with or without multiplier, excluding kits and accessories (air filter, torque limiter, check relief valve...),
- Use of BSC2 oil (provide invoices),
- Conditions identical to the current standard warranty.

---

## 7. STORAGE CONDITIONS

### 7.1 Compressor

The equipment must be systematically stored in an area sheltered from bad weather.

The equipment must bear its original protective components until it is installed in its final application.

If installation is interrupted, put back in place the original protective components or equivalent components.

### 7.2 BSC2 oil

In its unopened original container in a dry, frost-free and light-free place.

The maximum shelf life is approx. 60 months.

---



## 8. SCRAPPING

The compressor must be scrapped in compliance with the regulations in force.

During this operation, particular care must be paid to the drainage stages of the compressor.

## 9. COMPRESSORS FORM INFORMATION


Before any material return, it is required to get an authorization from MOUVEX.

 <p style="text-align: center;"><b>After Sales Department</b></p> <p style="font-size: small;">Z.I. La Plaine des Isles - 2 rue des Caillottes - 89000 AUXERRE - FRANCE ☎ +33 3 86 49 87 25 - <a href="mailto:mouvex.customersupport@psgdover.com">mouvex.customersupport@psgdover.com</a></p>	<h3 style="margin: 0;">COMPRESSORS FORM INFORMATION</h3>	
<p style="font-size: small; margin: 0;">In order to treat correctly the warranty claims, please first complete this information form. Thanks to return us this completed document by email as soon as possible.</p>		
<b>NAME, ADDRESS AND PHONE NUMBER OF THE CUSTOMER</b>		
<p style="text-align: center; font-size: small;">Material purchased by :</p> <p>.....</p> <p>.....</p> <p>.....</p> <p>.....</p>	<p style="text-align: center; font-size: small;">Material mounted by :</p> <p>.....</p> <p>.....</p> <p>.....</p> <p>.....</p>	<p style="text-align: center; font-size: small;">Material used by :</p> <p>.....</p> <p>.....</p> <p>.....</p> <p style="font-size: x-small;">☛ Person to contact for technical information :</p> <p>.....</p> <p style="font-size: x-small;">☎ .....</p>
<b>EQUIPMENT CONCERNÉ</b>		
<p> <input type="checkbox"/> Screw compressor    <input type="checkbox"/> Vane compressor    Type : .....                  Delivery date : ..... Starting-up date : .....                  Serial N° : ..... Running time estimation (hours) : .....                  Have you already replaced the equipment by a new one ?    <input type="checkbox"/> Yes    <input type="checkbox"/> No    ☛ If yes, indicate its serial N° : .....             </p>		
<p style="text-align: center; font-size: small;">TYPE OF INSTALLATION</p> <p> <input type="checkbox"/> Direct PTO drive  <input type="checkbox"/> Belt drive system  <input type="checkbox"/> Torque limiter (value) : .....  <input type="checkbox"/> Pressure relief valve setting (value) : .....  <input type="checkbox"/> Package DDNC      <input type="checkbox"/> Package DDIC  <input type="checkbox"/> Other (electric, diesel or hydraulic motor)                  ☛ Brief description :                  (please join a drawing or pictures of the installation)                  .....                  .....                  .....                  .....             </p>	<p style="text-align: center; font-size: small;">OPERATING PARAMETERS</p> <p>                 ☛ Compressor's speed : ..... rpm                  ☛ Operating pressure : ..... bar                  ☛ Motor speed at the time or the incident : ..... rpm                  ☛ PTO ratio : .....                  ☛ Product transferred : .....             </p>	
<p style="text-align: center; font-size: small;">SUCTION CONDITIONS</p> <p> <input type="checkbox"/> Air connection on truck chimney  <input type="checkbox"/> Direct air connection  <input type="checkbox"/> Flexible pipe between filter and compressor  <input type="checkbox"/> Stainless steel pipe between filter and compressor  <input type="checkbox"/> Filter type : .....             </p>		
<b>DESCRIPTION OF THE MATTER</b>		
<p> <input type="checkbox"/> Leakage      <input type="checkbox"/> Insufficient flow      <input type="checkbox"/> Insufficient pressure  <input type="checkbox"/> Blocking      <input type="checkbox"/> Noise / vibration      <input type="checkbox"/> Other : .....                  .....                  .....                  .....                  .....                  .....                  .....                  .....                  .....                  .....             </p>		
<p style="font-size: small; margin: 0;">                  IN CASE OF RETURN OF MATERIAL TO OUR FACTORY, PLEASE REQUEST IMPERATIVELY BEFORE SENDING                  THE MATERIAL RETURN AUTHORIZATION (RMA) WHICH WILL BE PROVIDED TO YOU BY MOUVEX AFTER SALES DEPARTMENT.             </p>		

# 10. OVERALL DIMENSIONS

CAD generated and maintained drawing. All printed and electronic copies outside of PSG AUXERRE database are "Uncontrolled" and shall be used for reference only.

## COMPRESSEUR B200 12R/10L PF/PS

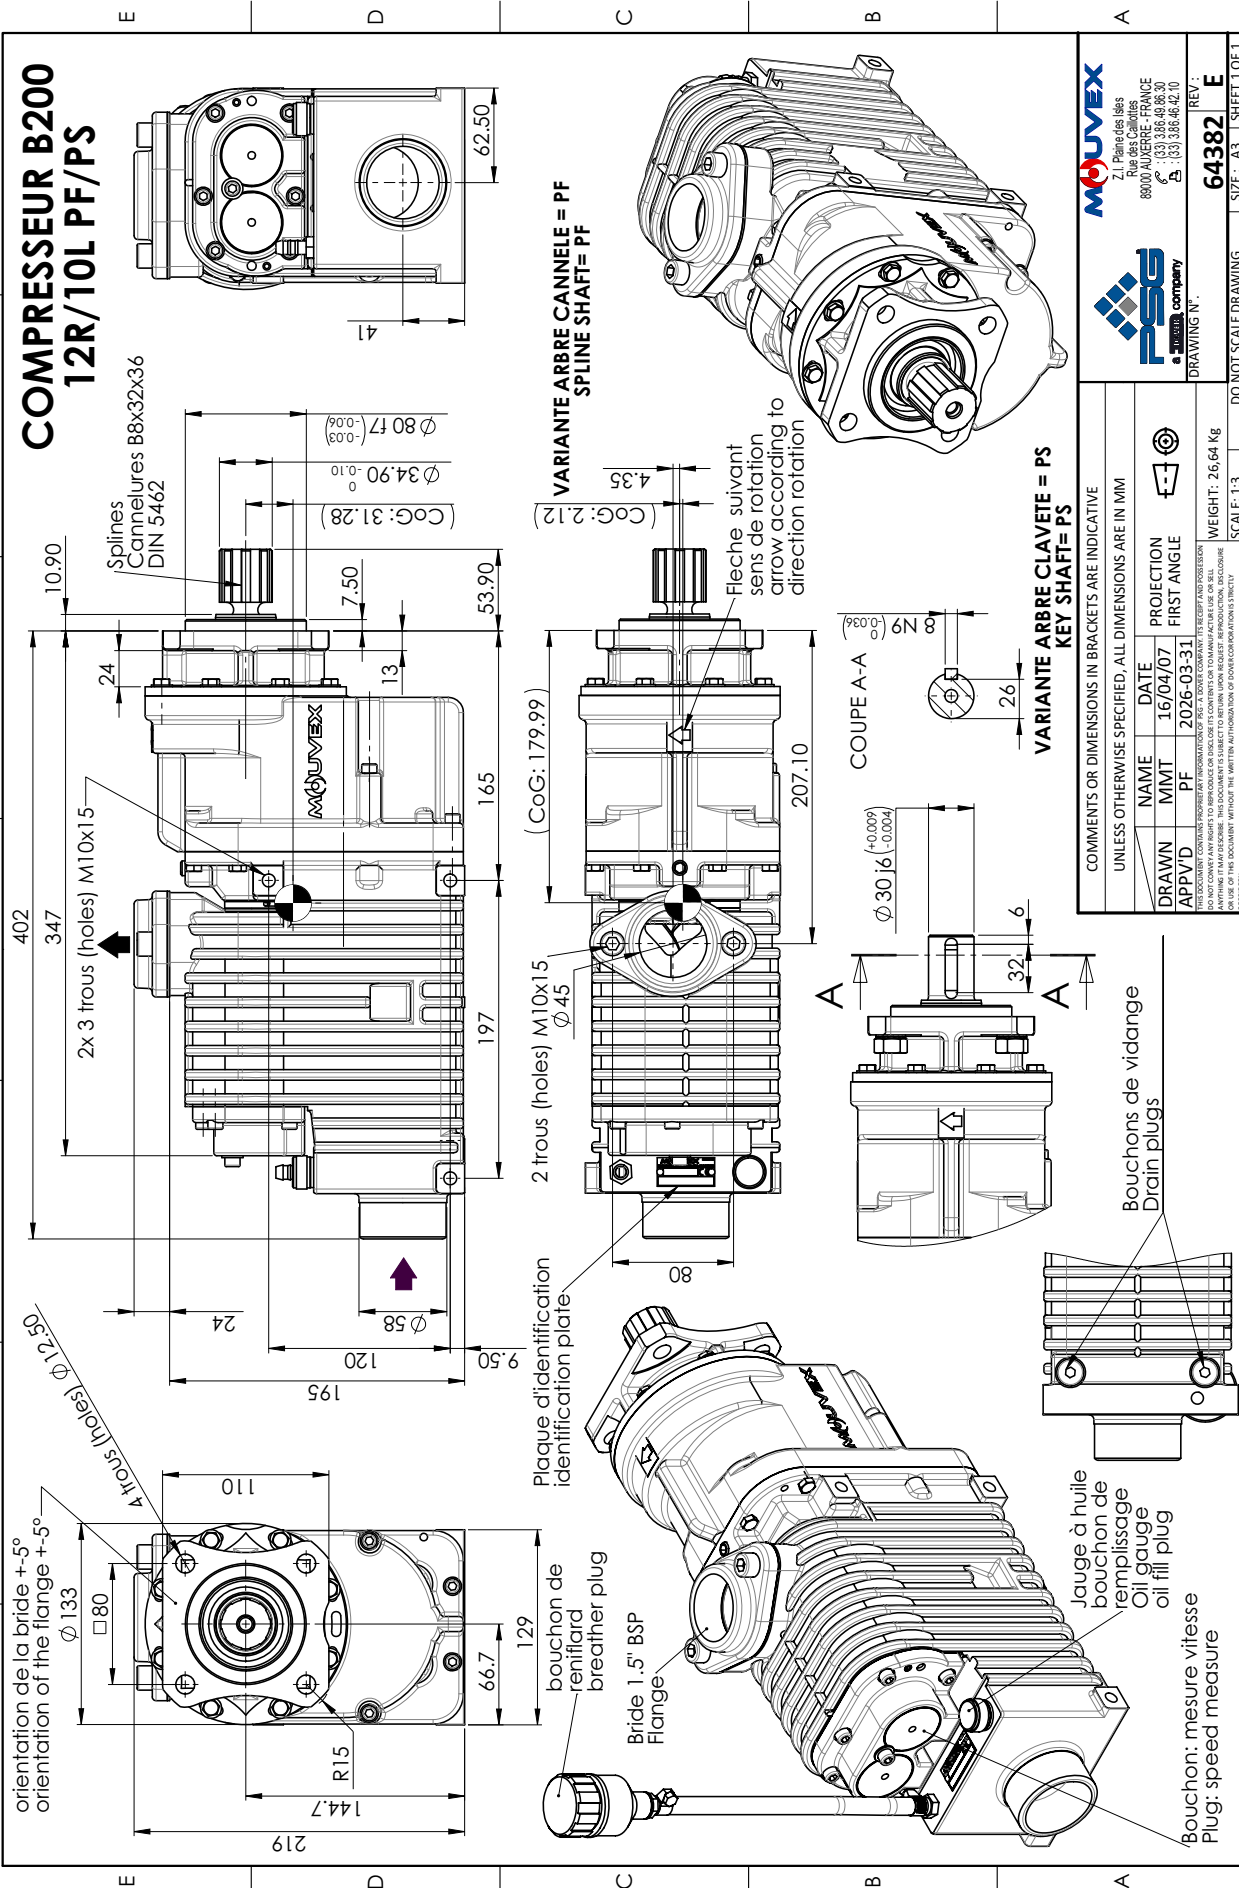


71, Place des Lèges Rue des Calottes 88000 AUXERRE - FRANCE ☎ (+33) 3 86 68 86 30 📠 (+33) 3 86 66 42 10			
COMMENTS OR DIMENSIONS IN BRACKETS ARE INDICATIVE UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN MM		PROJECTION FIRST ANGLE	
DRAWN MMT	DATE 16/04/07	WEIGHT: 26,64 Kg	
APP'VD PF	2026-03-31	SCALE: 1:3	
DO NOT SCALE DRAWING		SIZE: A3 SHEET 1 OF 1	



# 10. OVERALL DIMENSIONS (continued)

## COMBINE CLAPET DOUBLE SOUPE B200 CHECK AND DOUBLE RELIEF VALVE B200

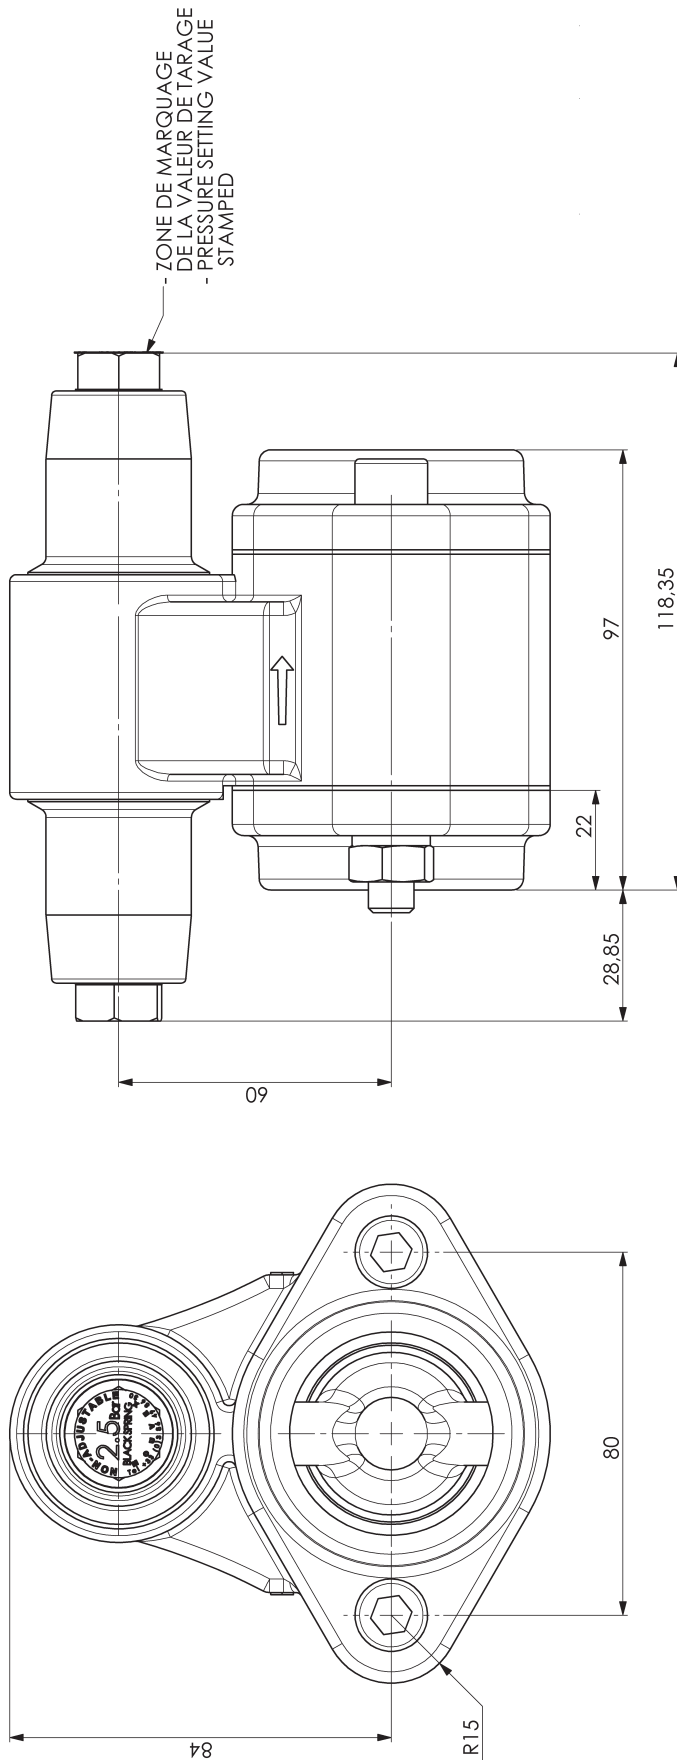

- DEBIT MAXIMUM / MAXIMUM FLOW RATE : 200 m<sup>3</sup>/hr
- PERTE DE CHARGE DU CLAPET AU DEBIT MAXIMUM / CHECK VALVE PRESSURE DROP AT MAXIMUM FLOW : < 0.1 BAR
- REGLAGES DU TARAGE / RELIEF VALVE SETTINGS : 2,0/2,3/2,5 BAR ± 7%
- PERTE DE CHARGE MAXIMALE AU TRAVERS DES SOUPEPES / MAXIMUM RELIEF VALVES PRESSURE DROP : 0.2 BAR

DATE: 15/11/12	ECHELLE: 1:1	MASSÉ: 2.79Kg	VERIFIE PAR: JFB
DESINE PAR: MMT	VERIFIE PAR: JFB	MASSÉ: 2.79Kg	CHEQUE PAR: JFB
<p>LES INFORMATIONS CONTENUES DANS CE DOCUMENT SONT LA PROPRIETE DE MOUVEX / LINE SOCIETE DE          DISTRIBUTION EN FRANCE. TOUTES REPRODUCTIONS NON AUTORISEES SONT INTERDITES. EN CAS DE          REPRODUCTION NON AUTORISEE, MOUVEX SE RESERVE LE DROIT DE POURSUIVRE EN JUSTICE          DEVANT LA JUSTICE. LA VENTE DES INFORMATIONS QUI CONTIENNENT LA REPRODUCTION, L'AVILISATION OU L'USAGE DE          CE DOCUMENT SANS AUTORISATION DE MOUVEX CORPORATION EST STRICTEMENT INTERDITE.          THIS DOCUMENT IS THE PROPERTY OF MOUVEX CORPORATION. ANY REPRODUCTION, REPRODUCTION OR          ITS REPRODUCTION WITHOUT THE WRITTEN PERMISSION OF MOUVEX CORPORATION IS STRICTLY FORBIDDEN.          TO MANUFACTURE USE OR RESELLING IT MAY DESCRIBE THIS DOCUMENT IS SUBJECT TO RETURN UPON          REQUEST. REPRODUCTION, DISSEMINATION OR USE OF THIS DOCUMENT WITHOUT THE SPECIFIC WRITTEN          AUTHORIZATION OF MOUVEX CORPORATION IS STRICTLY FORBIDDEN.</p>			
		Z.I. Plaine des Isles - Rue des Callottes - 89000 AUXERRE - FRANCE SERVICE: Tel:Phone: (33) 3.36.43.66.30 - Fax: (33) 3.36.46.62.10 Les données entre parenthèses sont à titre indicatif. The data in brackets are given for information only.	
DEPART: BE NOMBRE DE PLAN: 1 FORMAT: A3		REV: 0 REV: 1 REV: 2 REV: 3 REV: 4 REV: 5 REV: 6 REV: 7 REV: 8 REV: 9 REV: 10 REV: 11 REV: 12 REV: 13 REV: 14 REV: 15 REV: 16 REV: 17 REV: 18 REV: 19 REV: 20 REV: 21 REV: 22 REV: 23 REV: 24 REV: 25 REV: 26 REV: 27 REV: 28 REV: 29 REV: 30 REV: 31 REV: 32 REV: 33 REV: 34 REV: 35 REV: 36 REV: 37 REV: 38 REV: 39 REV: 40 REV: 41 REV: 42 REV: 43 REV: 44 REV: 45 REV: 46 REV: 47 REV: 48 REV: 49 REV: 50 REV: 51 REV: 52 REV: 53 REV: 54 REV: 55 REV: 56 REV: 57 REV: 58 REV: 59 REV: 60 REV: 61 REV: 62 REV: 63 REV: 64 REV: 65 REV: 66 REV: 67 REV: 68 REV: 69 REV: 70 REV: 71 REV: 72 REV: 73 REV: 74 REV: 75 REV: 76 REV: 77 REV: 78 REV: 79 REV: 80 REV: 81 REV: 82 REV: 83 REV: 84 REV: 85 REV: 86 REV: 87 REV: 88 REV: 89 REV: 90 REV: 91 REV: 92 REV: 93 REV: 94 REV: 95 REV: 96 REV: 97 REV: 98 REV: 99 REV: 100 REV: 101 REV: 102 REV: 103 REV: 104 REV: 105 REV: 106 REV: 107 REV: 108 REV: 109 REV: 110 REV: 111 REV: 112 REV: 113 REV: 114 REV: 115 REV: 116 REV: 117 REV: 118 REV: 119 REV: 120 REV: 121 REV: 122 REV: 123 REV: 124 REV: 125 REV: 126 REV: 127 REV: 128 REV: 129 REV: 130 REV: 131 REV: 132 REV: 133 REV: 134 REV: 135 REV: 136 REV: 137 REV: 138 REV: 139 REV: 140 REV: 141 REV: 142 REV: 143 REV: 144 REV: 145 REV: 146 REV: 147 REV: 148 REV: 149 REV: 150 REV: 151 REV: 152 REV: 153 REV: 154 REV: 155 REV: 156 REV: 157 REV: 158 REV: 159 REV: 160 REV: 161 REV: 162 REV: 163 REV: 164 REV: 165 REV: 166 REV: 167 REV: 168 REV: 169 REV: 170 REV: 171 REV: 172 REV: 173 REV: 174 REV: 175 REV: 176 REV: 177 REV: 178 REV: 179 REV: 180 REV: 181 REV: 182 REV: 183 REV: 184 REV: 185 REV: 186 REV: 187 REV: 188 REV: 189 REV: 190 REV: 191 REV: 192 REV: 193 REV: 194 REV: 195 REV: 196 REV: 197 REV: 198 REV: 199 REV: 200 REV: 201 REV: 202 REV: 203 REV: 204 REV: 205 REV: 206 REV: 207 REV: 208 REV: 209 REV: 210 REV: 211 REV: 212 REV: 213 REV: 214 REV: 215 REV: 216 REV: 217 REV: 218 REV: 219 REV: 220 REV: 221 REV: 222 REV: 223 REV: 224 REV: 225 REV: 226 REV: 227 REV: 228 REV: 229 REV: 230 REV: 231 REV: 232 REV: 233 REV: 234 REV: 235 REV: 236 REV: 237 REV: 238 REV: 239 REV: 240 REV: 241 REV: 242 REV: 243 REV: 244 REV: 245 REV: 246 REV: 247 REV: 248 REV: 249 REV: 250 REV: 251 REV: 252 REV: 253 REV: 254 REV: 255 REV: 256 REV: 257 REV: 258 REV: 259 REV: 260 REV: 261 REV: 262 REV: 263 REV: 264 REV: 265 REV: 266 REV: 267 REV: 268 REV: 269 REV: 270 REV: 271 REV: 272 REV: 273 REV: 274 REV: 275 REV: 276 REV: 277 REV: 278 REV: 279 REV: 280 REV: 281 REV: 282 REV: 283 REV: 284 REV: 285 REV: 286 REV: 287 REV: 288 REV: 289 REV: 290 REV: 291 REV: 292 REV: 293 REV: 294 REV: 295 REV: 296 REV: 297 REV: 298 REV: 299 REV: 300 REV: 301 REV: 302 REV: 303 REV: 304 REV: 305 REV: 306 REV: 307 REV: 308 REV: 309 REV: 310 REV: 311 REV: 312 REV: 313 REV: 314 REV: 315 REV: 316 REV: 317 REV: 318 REV: 319 REV: 320 REV: 321 REV: 322 REV: 323 REV: 324 REV: 325 REV: 326 REV: 327 REV: 328 REV: 329 REV: 330 REV: 331 REV: 332 REV: 333 REV: 334 REV: 335 REV: 336 REV: 337 REV: 338 REV: 339 REV: 340 REV: 341 REV: 342 REV: 343 REV: 344 REV: 345 REV: 346 REV: 347 REV: 348 REV: 349 REV: 350 REV: 351 REV: 352 REV: 353 REV: 354 REV: 355 REV: 356 REV: 357 REV: 358 REV: 359 REV: 360 REV: 361 REV: 362 REV: 363 REV: 364 REV: 365 REV: 366 REV: 367 REV: 368 REV: 369 REV: 370 REV: 371 REV: 372 REV: 373 REV: 374 REV: 375 REV: 376 REV: 377 REV: 378 REV: 379 REV: 380 REV: 381 REV: 382 REV: 383 REV: 384 REV: 385 REV: 386 REV: 387 REV: 388 REV: 389 REV: 390 REV: 391 REV: 392 REV: 393 REV: 394 REV: 395 REV: 396 REV: 397 REV: 398 REV: 399 REV: 400 REV: 401 REV: 402 REV: 403 REV: 404 REV: 405 REV: 406 REV: 407 REV: 408 REV: 409 REV: 410 REV: 411 REV: 412 REV: 413 REV: 414 REV: 415 REV: 416 REV: 417 REV: 418 REV: 419 REV: 420 REV: 421 REV: 422 REV: 423 REV: 424 REV: 425 REV: 426 REV: 427 REV: 428 REV: 429 REV: 430 REV: 431 REV: 432 REV: 433 REV: 434 REV: 435 REV: 436 REV: 437 REV: 438 REV: 439 REV: 440 REV: 441 REV: 442 REV: 443 REV: 444 REV: 445 REV: 446 REV: 447 REV: 448 REV: 449 REV: 450 REV: 451 REV: 452 REV: 453 REV: 454 REV: 455 REV: 456 REV: 457 REV: 458 REV: 459 REV: 460 REV: 461 REV: 462 REV: 463 REV: 464 REV: 465 REV: 466 REV: 467 REV: 468 REV: 469 REV: 470 REV: 471 REV: 472 REV: 473 REV: 474 REV: 475 REV: 476 REV: 477 REV: 478 REV: 479 REV: 480 REV: 481 REV: 482 REV: 483 REV: 484 REV: 485 REV: 486 REV: 487 REV: 488 REV: 489 REV: 490 REV: 491 REV: 492 REV: 493 REV: 494 REV: 495 REV: 496 REV: 497 REV: 498 REV: 499 REV: 500 REV: 501 REV: 502 REV: 503 REV: 504 REV: 505 REV: 506 REV: 507 REV: 508 REV: 509 REV: 510 REV: 511 REV: 512 REV: 513 REV: 514 REV: 515 REV: 516 REV: 517 REV: 518 REV: 519 REV: 520 REV: 521 REV: 522 REV: 523 REV: 524 REV: 525 REV: 526 REV: 527 REV: 528 REV: 529 REV: 530 REV: 531 REV: 532 REV: 533 REV: 534 REV: 535 REV: 536 REV: 537 REV: 538 REV: 539 REV: 540 REV: 541 REV: 542 REV: 543 REV: 544 REV: 545 REV: 546 REV: 547 REV: 548 REV: 549 REV: 550 REV: 551 REV: 552 REV: 553 REV: 554 REV: 555 REV: 556 REV: 557 REV: 558 REV: 559 REV: 560 REV: 561 REV: 562 REV: 563 REV: 564 REV: 565 REV: 566 REV: 567 REV: 568 REV: 569 REV: 570 REV: 571 REV: 572 REV: 573 REV: 574 REV: 575 REV: 576 REV: 577 REV: 578 REV: 579 REV: 580 REV: 581 REV: 582 REV: 583 REV: 584 REV: 585 REV: 586 REV: 587 REV: 588 REV: 589 REV: 590 REV: 591 REV: 592 REV: 593 REV: 594 REV: 595 REV: 596 REV: 597 REV: 598 REV: 599 REV: 600 REV: 601 REV: 602 REV: 603 REV: 604 REV: 605 REV: 606 REV: 607 REV: 608 REV: 609 REV: 610 REV: 611 REV: 612 REV: 613 REV: 614 REV: 615 REV: 616 REV: 617 REV: 618 REV: 619 REV: 620 REV: 621 REV: 622 REV: 623 REV: 624 REV: 625 REV: 626 REV: 627 REV: 628 REV: 629 REV: 630 REV: 631 REV: 632 REV: 633 REV: 634 REV: 635 REV: 636 REV: 637 REV: 638 REV: 639 REV: 640 REV: 641 REV: 642 REV: 643 REV: 644 REV: 645 REV: 646 REV: 647 REV: 648 REV: 649 REV: 650 REV: 651 REV: 652 REV: 653 REV: 654 REV: 655 REV: 656 REV: 657 REV: 658 REV: 659 REV: 660 REV: 661 REV: 662 REV: 663 REV: 664 REV: 665 REV: 666 REV: 667 REV: 668 REV: 669 REV: 670 REV: 671 REV: 672 REV: 673 REV: 674 REV: 675 REV: 676 REV: 677 REV: 678 REV: 679 REV: 680 REV: 681 REV: 682 REV: 683 REV: 684 REV: 685 REV: 686 REV: 687 REV: 688 REV: 689 REV: 690 REV: 691 REV: 692 REV: 693 REV: 694 REV: 695 REV: 696 REV: 697 REV: 698 REV: 699 REV: 700 REV: 701 REV: 702 REV: 703 REV: 704 REV: 705 REV: 706 REV: 707 REV: 708 REV: 709 REV: 710 REV: 711 REV: 712 REV: 713 REV: 714 REV: 715 REV: 716 REV: 717 REV: 718 REV: 719 REV: 720 REV: 721 REV: 722 REV: 723 REV: 724 REV: 725 REV: 726 REV: 727 REV: 728 REV: 729 REV: 730 REV: 731 REV: 732 REV: 733 REV: 734 REV: 735 REV: 736 REV: 737 REV: 738 REV: 739 REV: 740 REV: 741 REV: 742 REV: 743 REV: 744 REV: 745 REV: 746 REV: 747 REV: 748 REV: 749 REV: 750 REV: 751 REV: 752 REV: 753 REV: 754 REV: 755 REV: 756 REV: 757 REV: 758 REV: 759 REV: 760 REV: 761 REV: 762 REV: 763 REV: 764 REV: 765 REV: 766 REV: 767 REV: 768 REV: 769 REV: 770 REV: 771 REV: 772 REV: 773 REV: 774 REV: 775 REV: 776 REV: 777 REV: 778 REV: 779 REV: 780 REV: 781 REV: 782 REV: 783 REV: 784 REV: 785 REV: 786 REV: 787 REV: 788 REV: 789 REV: 790 REV: 791 REV: 792 REV: 793 REV: 794 REV: 795 REV: 796 REV: 797 REV: 798 REV: 799 REV: 800 REV: 801 REV: 802 REV: 803 REV: 804 REV: 805 REV: 806 REV: 807 REV: 808 REV: 809 REV: 810 REV: 811 REV: 812 REV: 813 REV: 814 REV: 815 REV: 816 REV: 817 REV: 818 REV: 819 REV: 820 REV: 821 REV: 822 REV: 823 REV: 824 REV: 825 REV: 826 REV: 827 REV: 828 REV: 829 REV: 830 REV: 831 REV: 832 REV: 833 REV: 834 REV: 835 REV: 836 REV: 837 REV: 838 REV: 839 REV: 840 REV: 841 REV: 842 REV: 843 REV: 844 REV: 845 REV: 846 REV: 847 REV: 848 REV: 849 REV: 850 REV: 851 REV: 852 REV: 853 REV: 854 REV: 855 REV: 856 REV: 857 REV: 858 REV: 859 REV: 860 REV: 861 REV: 862 REV: 863 REV: 864 REV: 865 REV: 866 REV: 867 REV: 868 REV: 869 REV: 870 REV: 871 REV: 872 REV: 873 REV: 874 REV: 875 REV: 876 REV: 877 REV: 878 REV: 879 REV: 880 REV: 881 REV: 882 REV: 883 REV: 884 REV: 885 REV: 886 REV: 887 REV: 888 REV: 889 REV: 890 REV: 891 REV: 892 REV: 893 REV: 894 REV: 895 REV: 896 REV: 897 REV: 898 REV: 899 REV: 900 REV: 901 REV: 902 REV: 903 REV: 904 REV: 905 REV: 906 REV: 907 REV: 908 REV: 909 REV: 910 REV: 911 REV: 912 REV: 913 REV: 914 REV: 915 REV: 916 REV: 917 REV: 918 REV: 919 REV: 920 REV: 921 REV: 922 REV: 923 REV: 924 REV: 925 REV: 926 REV: 927 REV: 928 REV: 929 REV: 930 REV: 931 REV: 932 REV: 933 REV: 934 REV: 935 REV: 936 REV: 937 REV: 938 REV: 939 REV: 940 REV: 941 REV: 942 REV: 943 REV: 944 REV: 945 REV: 946 REV: 947 REV: 948 REV: 949 REV: 950 REV: 951 REV: 952 REV: 953 REV: 954 REV: 955 REV: 956 REV: 957 REV: 958 REV: 959 REV: 960 REV: 961 REV: 962 REV: 963 REV: 964 REV: 965 REV: 966 REV: 967 REV: 968 REV: 969 REV: 970 REV: 971 REV: 972 REV: 973 REV: 974 REV: 975 REV: 976 REV: 977 REV: 978 REV: 979 REV: 980 REV: 981 REV: 982 REV: 983 REV: 984 REV: 985 REV: 986 REV: 987 REV: 988 REV: 989 REV: 990 REV: 991 REV: 992 REV: 993 REV: 994 REV: 995 REV: 996 REV: 997 REV: 998 REV: 999 REV: 1000 REV: 1001 REV: 1002 REV: 1003 REV: 1004 REV: 1005 REV: 1006 REV: 1007 REV: 1008 REV: 1009 REV: 1010 REV: 1011 REV: 1012 REV: 1013 REV: 1014 REV: 1015 REV: 1016 REV: 1017 REV: 1018 REV: 1019 REV: 1020 REV: 1021 REV: 1022 REV: 1023 REV: 1024 REV: 1025 REV: 1026 REV: 1027 REV: 1028 REV: 1029 REV: 1030 REV: 1031 REV: 1032 REV: 1033 REV: 1034 REV: 1035 REV: 1036 REV: 1037 REV: 1038 REV: 1039 REV: 1040 REV: 1041 REV: 1042 REV: 1043 REV: 1044 REV: 1045 REV: 1046 REV: 1047 REV: 1048 REV: 1049 REV: 1050 REV: 1051 REV: 1052 REV: 1053 REV: 1054 REV: 1055 REV: 1056 REV: 1057 REV: 1058 REV: 1059 REV: 1060 REV: 1061 REV: 1062 REV: 1063 REV: 1064 REV: 1065 REV: 1066 REV: 1067 REV: 1068 REV: 1069 REV: 1070 REV: 1071 REV: 1072 REV: 1073 REV: 1074 REV: 1075 REV: 1076 REV: 1077 REV: 1078 REV: 1079 REV: 1080 REV: 1081 REV: 1082 REV: 1083 REV: 1084 REV: 1085 REV: 1086 REV: 1087 REV: 1088 REV: 1089 REV: 1090 REV: 1091 REV: 1092 REV: 1093 REV: 1094 REV: 1095 REV: 1096 REV: 1097 REV: 1098 REV: 1099 REV: 1100 REV: 1101 REV: 1102 REV: 1103 REV: 1104 REV: 1105 REV: 1106 REV: 1107 REV: 1108 REV: 1109 REV: 1110 REV: 1111 REV: 1112 REV: 1113 REV: 1114 REV: 1115 REV: 1116 REV: 1117 REV: 1118 REV: 1119 REV: 1120 REV: 1121 REV: 11	